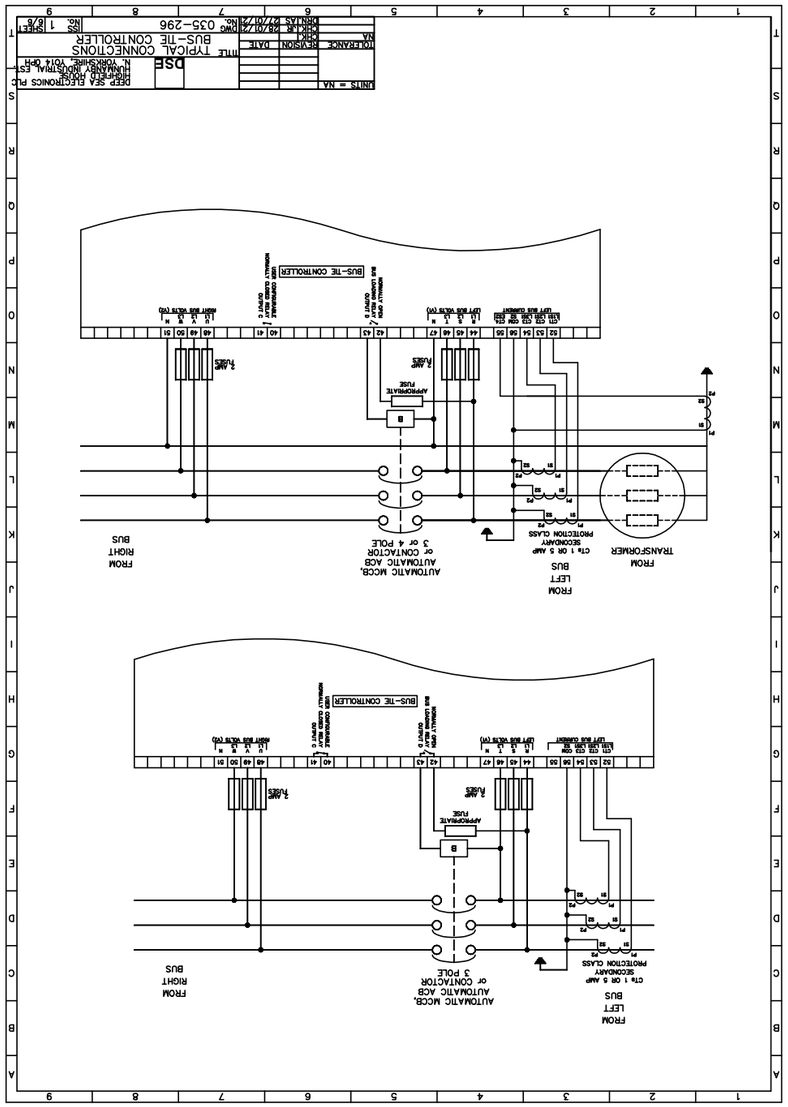
BUS-TE CONTROLLER
FROM LEFT BUS
FROM RIGHT BUS
TRANSFORMER
AUTOMATIC MCCB, AUTOMATIC ACB or CONTACTOR 3 or 4 POLE
CTs 1 OR 5 AMP SECONDARY PROTECTION CLASS
2 AMP FUSES
APPROPRIATE FUSE

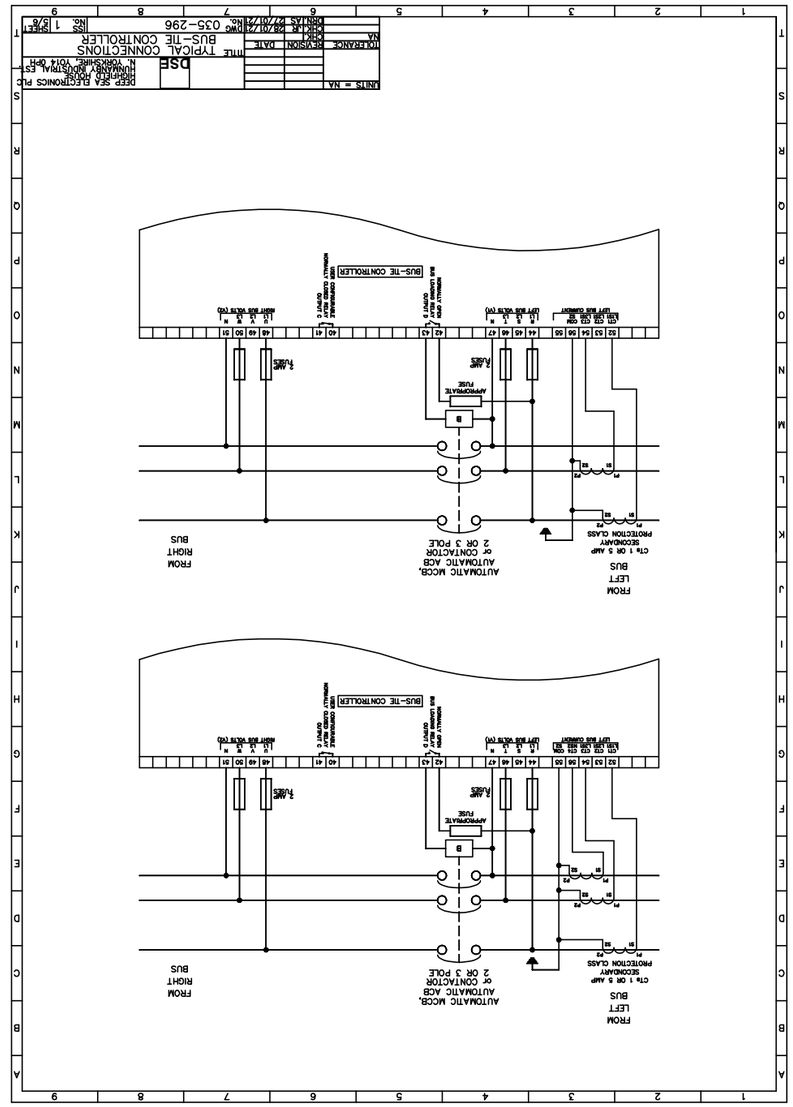
BUS-TE CONTROLLER
FROM LEFT BUS
FROM RIGHT BUS
AUTOMATIC MCCB, AUTOMATIC ACB or CONTACTOR 2 OR 3 POLE
CTs 1 OR 5 AMP SECONDARY PROTECTION CLASS
2 AMP FUSES
APPROPRIATE FUSE

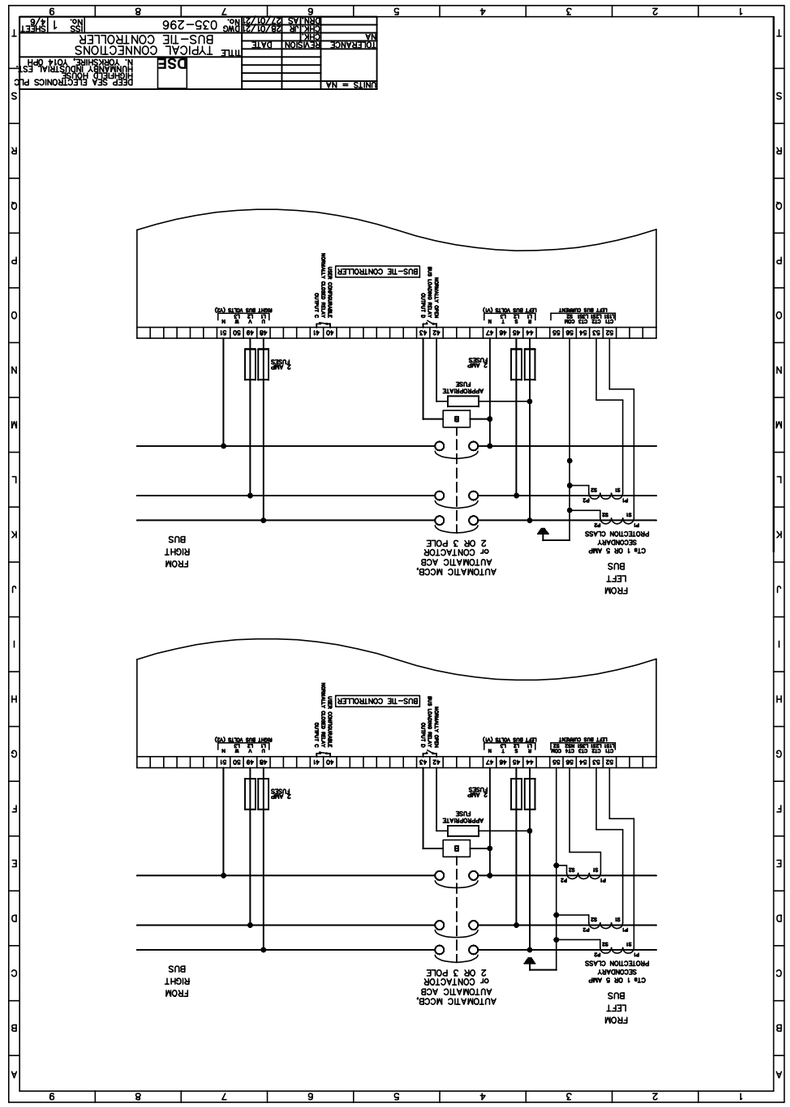
BUS-TE CONTROLLER
FROM LEFT BUS
FROM RIGHT BUS
AUTOMATIC MCCB, AUTOMATIC ACB or CONTACTOR 2 OR 3 POLE
CTs 1 OR 5 AMP SECONDARY PROTECTION CLASS
2 AMP FUSES
APPROPRIATE FUSE